

AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS



- Carefully read the instructions for safe and correct use of the air-conditioner.
- Carefully keep the instructions as it can be referred to at any time.

CONTENTS

Precautions	1
Buttons Description	2
Usage for Mode	8
Auto operation mode	8
Cool/Heat operation mode	8
Fan operation mode	8
Dry operation mode	9
Usage	9
Fix batteries	9


Precautions

- Before first time use of the remote controller, install the batteries and ensure the “+” and “-” poles are correctly positioned.
- Ensure the remote controller is pointed to the signal receiving window and that there is no obstruction between them, the distance is 8m at the maximum.
- Do not let the remote controller drop or fling it at will. Do not let any liquid in the remote controller. Do not expose the remote controller directly to the sunlight or excessive heat.
- If the remote controller does not function normally, remove the batteries for 30 seconds before reinstall them. If that doesn't work, replace the batteries.
- When replacing the batteries, do not mix the new batteries with old ones or mix batteries of different types, which could cause failure of the remote controller.
- If the remote controller is not to be used for a long period of time, remove the batteries first, lest the leakage from them may damage the remote controller.
- Properly dispose the discarded batteries.

Note:

- 1. This is an universal remote controller which provide all the function buttons. Please understand that some of the buttons may not function, depending on the specific air conditioner you have purchased. (If a specific function is not available on the air conditioner, pressing the corresponding button will simply have no respond.)**
- 2. HEAT and ELE.H functions are not available for single cool model, thus these two buttons do not work correspondingly.**

Buttons Description

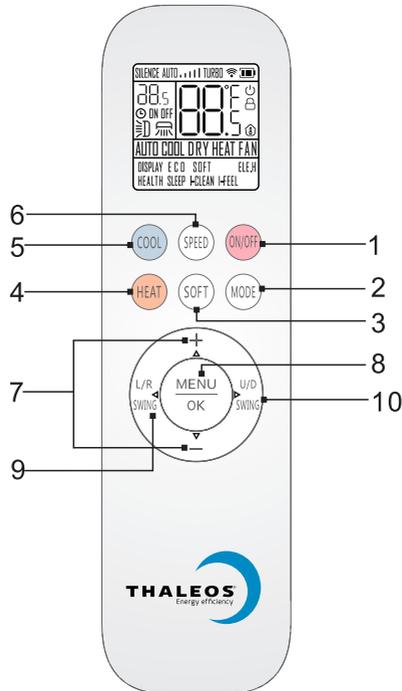

1. ON/OFF Button

- * Press this button to turn on/off the unit.
- * This will clear up the existing timer and sleep setting.

2. MODE Button

- * Press this button, you can select operation mode as follows:

→AUTO→COOL→DRY→HEAT→FAN

**Note: Heat mode is not available for single cool model.
Please read the Usage for Mode for a detailed description.**

3. SOFT Button

- * When the air-conditioner is on the mode of cooling, press this button, the screen will activate (deactivate) “SOFT” character.
- * The soft function can prevent people from being blown directly by cold air.
- * After turning on soft function:
 - a. The up/down swing function is set to no swing, and the screen does not display the “扇” icon.

Buttons Description

- b. Press all of the “SOFT”, “OFF”, “U/D SWING” or switch mode can cancel the soft function, and the screen does not display the “SOFT” character.

4. HEAT Button

 
- * Press this button to enter “HEAT” mode.

5. COOL Button

- * Press this button to enter “COOL” mode.

6. SPEED Button

- * Press this button, you can select fan speed as follows:



**Note: Auto is not available in fan mode.
Turbo is not available in auto mode.
This button is invalid in dry mode.**

7. + & - Button

- * Each time the “+” or “-” is pressed, the temperature setting will be increased or decrease by 1°C(1°F).
- * The temperature setting range: 16°C(60°F) ~ 32°C(90°F).

Note: The temperature cannot be set in auto or fan mode.

8. MENU & OK Button

- * Press the “MENU” button to enter the function selection mode. Then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the function which you need. After, press the “OK” button, turn on this function.
- * In function selection mode, press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING), the character in LCD will be flashing if the function can be selected.

9. L/R SWING Button

- * Press this button to activate left/right swing and press it again to turn off the swing function. The screen will display “” icon.

10. U/D SWING Button

- * Press this button to activate up/down swing and press it again to turn off the swing function. The screen will display “” icon.

Buttons Description

Note:

- * When the unit is on, press the “U/D SWING” button and hold for 3 seconds, the button will shift to be the functional button of “Rated swinging”, and then press the “U/D SWING” button to select the positions of Rated swinging.
- * Only by pressing the “U/D SWING” button again and hold for 3 seconds or reinstall the battery of the remote control, can the “U/D SWING” button resume its original function. The power on/off button of the remote control can not enable the exit of the “Rated swing” function.

11. HEALTH

- * When the unit is on, press the “MENU” button ,then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose “HEALTH” character, when the “HEALTH” character will blink, and press the “OK” button to highlight (not highlight) the “HEALTH” character, which will activate (deactivate) the health function.

12. ECO

- * In the cooling mode, the variable frequency air-conditioner will enter the ECO mode, which consumes the least electricity, and exit it automatically 8 hours after.
- * The ECO mode is not available on the fixed frequency air conditioner.
- * Changing modes or turning off the remote controller will automatically cancel the ECO function.
- * In the cooling mode, press the “MENU” button, then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the “ECO” character, when the “ECO” character will blink, and press the “OK” button to highlight (not highlight) the “ECO” character , which will activate (deactivate) the ECO function.

Note: The electricity consumption is affected by the ambient temperature and the house structure etc., and when the ambient temperature is high or the house has a large area, be cautious to use the ECO mode.

13. SLEEP

- * When the unit is on, press the “MENU” button, then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the “SLEEP” character, when the “SLEEP” character will blink, and press the “OK” button to highlight (not highlight) the “SLEEP” character, which will activate (deactivate) the function of sleep mode.

Buttons Description

- * The unit will exit SLEEP mode after 10 hours of continuous operation and restore to the previous status.

Note: The sleep function cannot be activated in fan or auto mode.

In the sleep mode, the screen of the air-conditioner is off.

14. ELE.H

- * When the unit is on, press the "MENU" button, then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the "ELE.H" character, when the "ELE.H" character blinks, and press the "OK" button to highlight (not highlight) the "ELE.H" character, which will activate (deactivate) the function of auxiliary heating.
- * The unit will activate the auxiliary heating function automatically according to the ambient temperature, so as to accelerate the heating.

15.DISPLAY

- * Press the "MENU" button, then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the "DISPLAY" character, when the character "DISPLAY" will blink, and press the "OK" button to activate (deactivate) the function of screen display.

16. I-FEEL

- * When the unit is on, press the "MENU" button, then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the "I-FEEL" character, when the "I-FEEL" character will blink, and press the "OK" button to highlight (not highlight) the "I-FEEL" character and " \updownarrow " icon, which will activate (deactivate) the I-FEEL function.

17. I-CLEAN

- * The unit will clean automatically the dust on the evaporator and dry or blow-dry the moisture.
- * When the air-conditioner is off, press the "MENU" button, then press Δ (+), ∇ (-), \triangleleft (L/R SWING) and \triangleright (U/D SWING) to choose the "I-CLEAN" character, when the "I-CLEAN" character will blink, and press the "OK" button to highlight (not highlight) the character "I-CLEAN", which will activate (deactivate) the function of cleaning.
- * The cleaning function will close automatically within an hour.

Buttons Description

18. Child-lock

- * Press the “HEAT” and “MODE” buttons at the same time and hold for at least 3 seconds to activate or deactivate the child-lock function.
- * When the child-lock function is activated, the remote control will be indicated “

19. Temperature setting function

- * When the unit is off, press the “Cool” button and the “Mode” button at the same time for 10 seconds or more, the maximum temperature setting value (32°C/90°F) will be displayed, and the “H” will flash, press the “+/-” button to adjust the range, and press the “Mode” button to confirm. The minimum temperature setting (16°C/60°F) is displayed, and the “L” flashes. Press the “+/-” button to adjust the minimum temperature range. Press “Mode” to confirm, then the setting is complete;
- * When setting the minimum temperature, long press the “Cool” button and “Mode” button for 10 seconds or more can switch to the maximum temperature;
- * You need to reset after replacing the battery.

20. °C/°F

- * The temperature is displayed by default in Celsius.
- * Press the “COOL” and “HEAT” buttons at the same time above 3 seconds, you can set the “C” or “°F”.

Note: Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.

21. 8°C heating

- * Only in the heating mode and in the power-on state, press the “MODE” and “+” buttons at the same time above 3 seconds to turn on or off the 8°C heating function.
- * After turning on the 8°C heating function:
 - a. Press the “HEAT” button, or switch mode, or select the sleep function, all can exit 8°C heating function.
 - b. Press the “SPEED”, “+”, “-” button is all non-effective.
 - c. Fahrenheit/Celsius switching function is non-effective.
 - d. Press the “MENU” button, ELE.H function is not selectable.
 - e. Turn off or on the unit again, 8°C heating function is still retained.

Buttons Description

22. TIMER

- * When the air-conditioner is turned on (off) and the menu is selected, press the “OK” button will enter the timer function setting. Then “⏰” icon and “OFF (ON)” character will light up, and the timer time will be displayed and flashed in the screen. Press the “△(+)” or “▽(-)” buttons to set the number of hours in which the unit will be turned on/off, and the timer range is 0.5 to 24 hours.
- * Press “OK” button again to confirm the setting, the “⏰” and “OFF (ON)” characters will stop flashing and remain lighting. Then the screen will display the corresponding mode, temperature, speed, swing, and all can be set by pressing the corresponding buttons. At this time, press the “OK” button could cancel the timer function.
- * After setting the timer power on (shutdown), if the timer time is not up, press the “ON/OFF” button to directly turn on (off) and cancel the timer power on (shutdown).
- * If the “△(+)” or “▽(-)” or “OK” button is not pressed within 10 seconds after the timer time start flashing, the timer setting will be exited.

23. Battery Power Display

- * The screen of the remote controller will display the battery electric quantity and display “🔋” icon.
- * When the battery power is low, the “🔋” icon will flash continuously.

24. Buzzer Silence

- * Press the “L/R SWING” and “MODE” buttons at the same time and hold for at least 3 seconds to activate or deactivate the one click silence function.

Usage for Mode

★ Auto operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select auto operation mode.
3. By pressing the “SPEED” button, you can select fan speed from Silence, Low, Mid-Low, Mid, Mid-High, High, Auto.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the auto mode, the temperature settings is non-effective.

★ Cool/Heat operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select cool or heat operation mode.
3. By pressing the “+” or “-” button, you can set temperature from 16°C (60°F) to 32°C(90°F), the display changes as you press the button.
4. By pressing the “SPEED” button, you can select fan speed from Silence, Low, Mid-Low, Mid, Mid-High, High, Turbo, Auto.
5. Press the “ON/OFF” button again, the air-conditioner stops.

Note: The cold wind type has no heating function.

★ Fan operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select fan operation mode.
3. By pressing the “SPEED” button, you can select fan speed from Low, Mid-Low, Mid, Mid-High, High, Tubro.
4. Press the “ON/OFF” button again, the air-conditioner stops.


Note: In the fan mode, the temperature settings is non-effective.

★ Dry operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select dry operation mode.
3. By pressing the “+” or “-” button, you can set temperature from 16°C (60°F) to 32°C(90°F), the display changes as you press the button.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the dry mode, the speed settings is non-effective.

★ Fix batteries

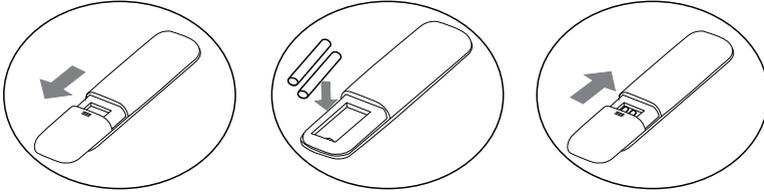

1. Slide to open the battery cover according to the direction indicated by the arrowhead.
2. Insert two brand new batteries (7#), and position the batteries to the right electric poles (+ & -).
3. Put back the battery cover.

